



 

### 1. Power

Press this button to wake up the machine and enter standby mode, ready to work, at this time, the Display (6) will show the current temperature. The Display (7) shows the last working process' set working hours.


### 2. Temperature Unit Switch Button °C / °F

Press on "°C / °F" to select the temperature display unit of the machine. There are two temperature units of Celsius and Fahrenheit to choose from.

### 3. Temperature, Time Setting

Press on   to switch between the temperature Display (6) or time Display (7).

### 4. Adjustment Button + -

Press on   to select the temperature or time to be adjusted, then use the "+" and "-" buttons.

### 5. Start/Stop Button

First Press, the machine starts working.

(wait for target temperature to be reached)

Second Press, the time begins to count down. (flashing of " : ")

Third Press, the machine stops working, back to standby mode.

### 6. Temperature Display

Display shows real-time working temperature

 
### 7. Time Display

In standby mode, the set target time is displayed. In working mode, the remaining working time is displayed.

## WHAT YOU NEED



Ziplock



Basin




Tasty Food

## SETTING UP


 
### FILL THE BASIN

- Fill a pot or container with water, between "MIN" and "MAX"
- Place it on a heat-safe surface or trivet, away from counter edges.



### ATTACH CHEF-S

 
- Loosen the rear screw on Heinzelmann CHEF-S clamp.
- Fit the clamp over the edge of your basin.
- Tighten the rear screw so it is snug against the wall of the basin.



### PLUG IN


- Plug in Heinzelmann CHEF-S.
- Place your food in a ziplock and lower the bag into the water.

## CLEANING

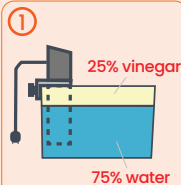


 80°C (176°F)

  3 hours (03:00)

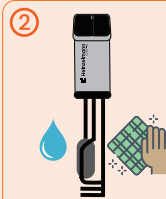

 Use tap water to clean the heater and other components carefully

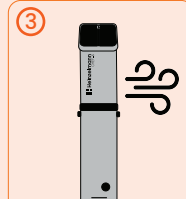

Dry and re-install